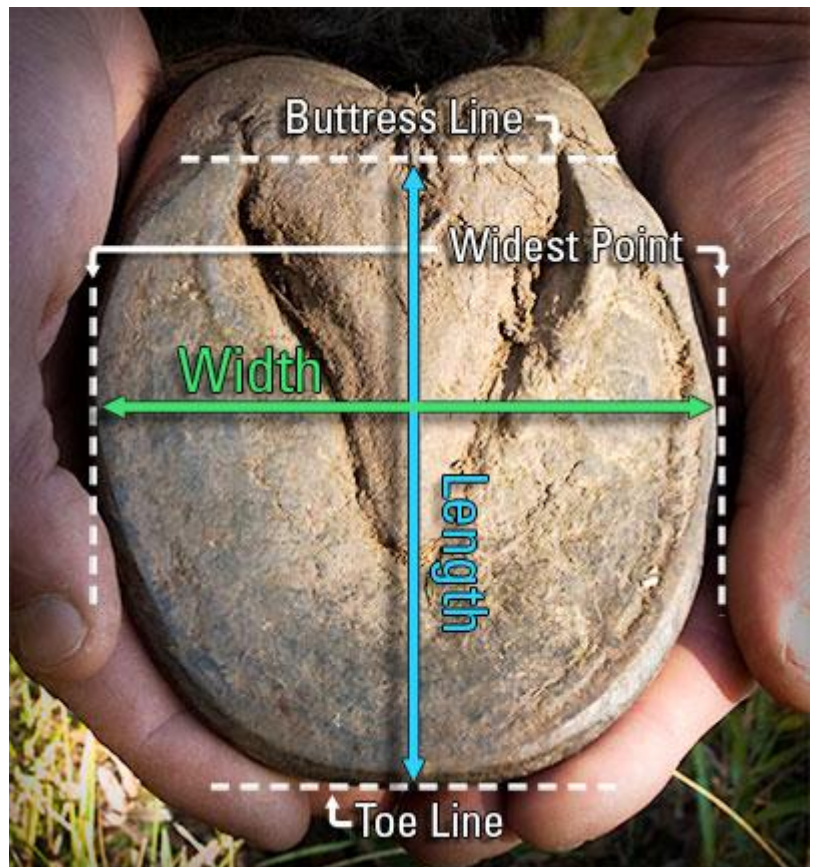

Easyboot Epic Sizing

All Easyboot sizing has changed! You MUST re-measure your horse's feet and compare to the size chart below to insure a proper fit!

How to get the correct size boot for your horse:

1. Measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel.
3. Compare your measurement with the proper size chart below.
4. Ideally, the width and length measurement will fit into the same Easyboot Epic size. If the width and length measurements indicate different Easyboot Epic sizes, select the larger Easyboot Epic size. If the width and length measurements are different by more than one size, EasyCare hoof boots are not recommended.



Easyboot Epic Sizing Chart

Size	Width in inches	Length in inches	Size	Width in mm	Length in mm
Pony	3 3/16"- 3 3/8"	3 3/8"- 3 5/8"	Pony	78-85mm	85-92mm
000	3 3/8"- 3 13/16"	3 5/8"- 4 3/16"	000	86-97mm	93-105mm
00	3 13/16"- 4 3/8"	4 3/16"- 4 5/8"	00	98-110mm	106-117mm
0	4 3/8"- 4 9/16"	4 5/8"- 4 15/16"	0	111-116mm	118-124mm
1	4 9/16"- 4 7/8"	4 15/16"- 5 1/8"	1	117-123mm	125-130mm
2	4 7/8"- 5 1/8"	5 1/8"- 5 9/16"	2	124-130mm	131-140mm
3	5 1/8"- 5 1/2"	5 9/16"- 5 15/16"	3	131-139mm	141-150mm
4	5 1/2"- 5 15/16"	5 15/16"- 6 7/16"	4	140-150mm	151-163mm
5	5 15/16"- 6 7/16"	6 7/16"- 6 7/8"	5	151-163mm	164-174mm
6	6 7/16"- 6 7/8"	6 7/8"- 7 7/16"	6	164-175mm	175-188mm
7	6 7/8"- 7 9/16"	7 7/16"- 7 3/4"	7	176-192mm	189-195mm